

PXF Lighting 73 Jutrzenki Street 02-230 Warsaw

2 +48 22 33 44 000, **3** +48 22 33 44 033



Œ


Installation instructions

VIP G/K LED

220-240V/50-60Hz

LEC

Power [W]	L [mm]	Cut-out diameter[mm]	Distance between brackets [mm]	Weight [kg]
13; 17	585	595x70	525	1,6 kg
19; 24	875	885x70	645	2,3 kg
25; 31	1165	1175x70	935	3,0 kg
32; 38	1455	1465x70	1225	3,6 kg
37; 44	1745	1755x70	1515	4,3 kg
43; 52	2035	2045x70	1805	5,1 kg

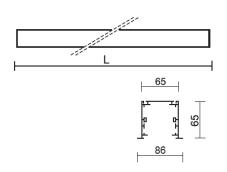

- a) Turn off the power in the circuit which the luminaire is going to be connected to; Carefully take the luminaire out of the package.
- **b)** Slide out the diffuser and detach the LED module fixed with magnets.
- c) Cut out an installation hole in the ceiling and space the brackets as indicated in the table above.

ATTENTION:

In case of several luminaires, sum up their lengths and add 10 mm to the result. For instance, the installation hole for the line VIP G/K LED 17W + VIP G/K LED 38W = 585+1455+10 = 2050 mm.



 
- **d)** Pull the power cable through the hole in the luminaire.
- e) Put the bracket screws into the holes in the luminaire and screw it to the ceiling.
- f) Connect the power cable as indicated on the connection terminal.
- g) Connect the LED source cables to the terminal as indicated on the picture. Pay special attention to the polarity while connecting the cables. (ATTENTION: reverse connection may permanently damage the LED sources.)
- h) Reattach the plate with the LED module;
- i) Slide in the diffuser back in the luminaire.

ATTENTION:

- to connect the luminaires in a line use linear joints,
- The screws should be tightened without using too much force not to cause any deformation to the profile.
- at the end of a luminous line attach the end caps.

 












Important warnings:

The luminaires may be installed by qualified registered personnel only. Any manipulation inside the luminaires when the power is activated causes the risk of electrical shock.

The manufacturer is not responsible for any flaws resulting from non-compliance with these instructions. The manufacturer reserves the right to change the construction of the luminaire. Do not install the luminaire in places without sufficient air circulation. To guarantee safe luminaire functioning, please follow the installation instructions.





